


FUTURA H

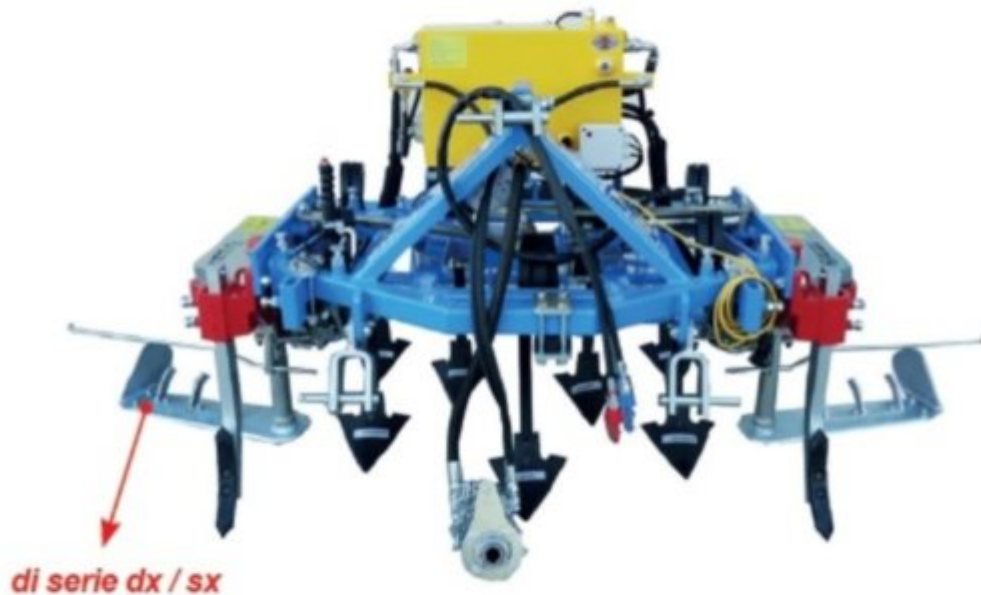

Cultivator with 30x30 spiral spring and cage roller

Pumps connected directly to the tractor power take-off (for rubber-tyred and crawler tractors)

Kit including multiplier double pump, hoses, filters, tank and oil

Type H single heat exchanger kit with thermostat

55 cm RH and LH side inter-row blades with single channel joystick for simultaneous manual emergency blade return

Bulldozer-like tilling spur

4,5 - 21 - 26 cm ploughshare (to specify during the order)









Rear roller mechanical adjustment (each)

RH fin (only for Futura 5)

LH fin (only for Futura 5)

Simultaneous RH and LH side widening with 2 quick tractor couplings FUTURA (H 3 model has 4 quick couplings because have RH - LH no-simoultaneously width extension)

Without wheels

Model	 CODE							
Futura H 3	0962	30 - 50	3	15 + 15	88 / 118	20	128 / 170	403
Futura H 5S	0963	40 - 70	5	15 + 15	128 / 158	20	168 / 210	610
Futura H 5	0964	40 - 70	5	15 + 15	148 / 178	20	188 / 230	613
Futura H 7	0965	60 - 90	7	15 + 15	163 / 193	20	203 / 245	653
Futura H 9	0966	60 - 90	9	15 + 15	208 / 238	20	248 / 290	708


FUTURA H 3

FUTURA H 5S

FUTURA H 5

FUTURA H 7

FUTURA H 9

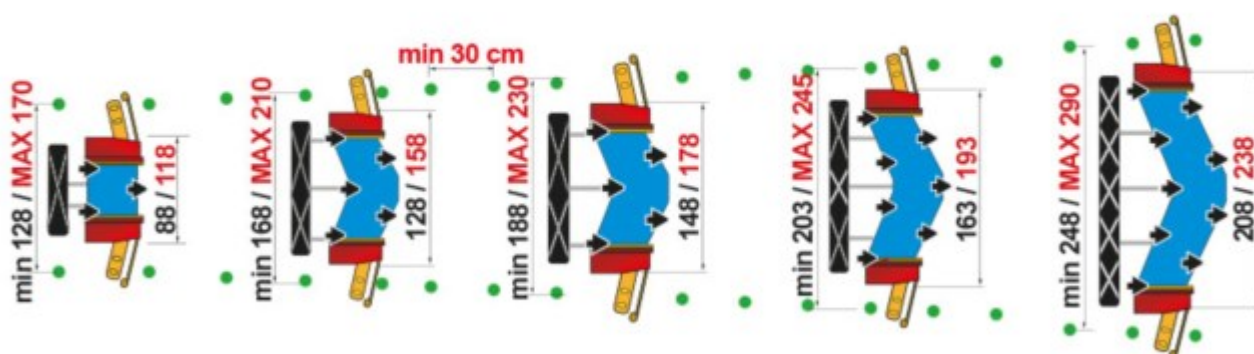

Optional

- CODE 0659 - Hydraulic roller adjustment with 2 quick tractor couplings

- CODE 1328 - RH and LH set 3 kit adapters in boron steel complete of reversible chisel and laterals fins

- CODE 1330 - Set 5 kit adapters in boron steel complete of reversible chisels and RH and LH laterals fins

- CODE 1332 - Set 7 kit adapters in boron steel complete of reversible chisels and RH and LH laterals fins

- CODE 1334 - Set 9 kit adapters in boron steel complete of reversible chisels and RH and LH laterals fins

- CODE 0024 - 250x100 mm pair of depth wheels with brackets (cannot be installed on Futura H 3 - 5S - 5 and Basic 3 - 4)

- CODE 0698 - RH hydraulic inter-row inclination with 2 quick tractor couplings. Dimension cm 6,5

- CODE 0724 - LH hydraulic inter-row inclination with 2 quick tractor couplings. Dimension cm 6,5
- CODE 1048 - RH inter-row hydraulic ascent and descent system stroke 20 cm PATENTED, with 2 quick tractor couplings. Dimension cm 10
- CODE 1049 - LH inter-row hydraulic ascent and descent system stroke 20 cm PATENTED, with 2 quick tractor couplings. Dimension cm 10
- CODE 0982 - Blade with clod breaker, fin and feeler pin cm 45 (additionally at the standard blade)
- CODE 0695 - Blade with clod breaker, fin and feeler pin cm 65 (additionally to standard blade)
- CODE 1160 - RH non-stop feeler pin holder
- CODE 1161 - LH non-stop feeler pin holder
- CODE 1085 - RH oscillating feeler pin holder adjustable in height
- CODE 1086 - LH oscillating feeler pin holder adjustable in height
- CODE 1050 - RH stump cleaner for inter-row kit (applicable simultaneously at following inter-row tools: inter-row blade, plant lifting ploughshare, circular cutter, rotary plant lifter and traction disk set)
- CODE 1051 - LH stump cleaner for inter-row kit (applicable simultaneously at following inter-row tools: inter-row blade, plant lifting ploughshare, circular cutter, rotary plant lifter and traction disk set)
- CODE 0483 - RH sled for terrain with stones or superficial roots
- CODE 1154 - LH sled for terrain with stones or superficial roots
- CODE 1187 - RH 45 cm inter-row plant lifting ploughshare
- CODE 1188 - LH 45 cm inter-row plant lifting ploughshare
- CODE 1268 - RH 55 cm inter-row plant lifting ploughshare
- CODE 1269 - LH 55 cm inter-row plant lifting ploughshare
- CODE 1157 - LH no traction bulldozer-disk diam. 320
- CODE 0488 - RH no traction bulldozer-disk diam. 320
- CODE 1267 - Adjustable no-traction universal rounded tiller discs
- CODE 1265 - Universal no traction adjustable ridger bit discs
- CODE 1313 - Universal no traction adjustable 2 set serrated ridger discs complete with cleaners on first disk